

Chip Upgrade Instructions



First unplug the unit and remove the SD card.

Remove the 4 screws from the bottom of the case and carefully remove the top cover.

Unplug the socket (C) from the switch (D).

Carefully remove the front cover plate (E).

Use a small screwdriver as shown below to pry the chip from the socket by alternating between the ends (A & B).

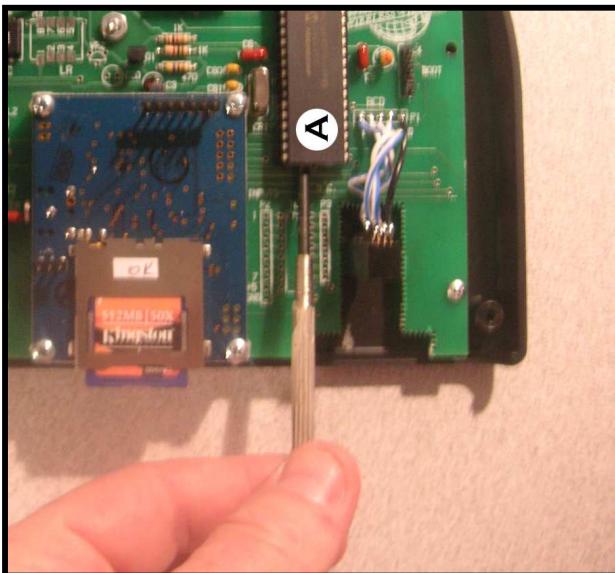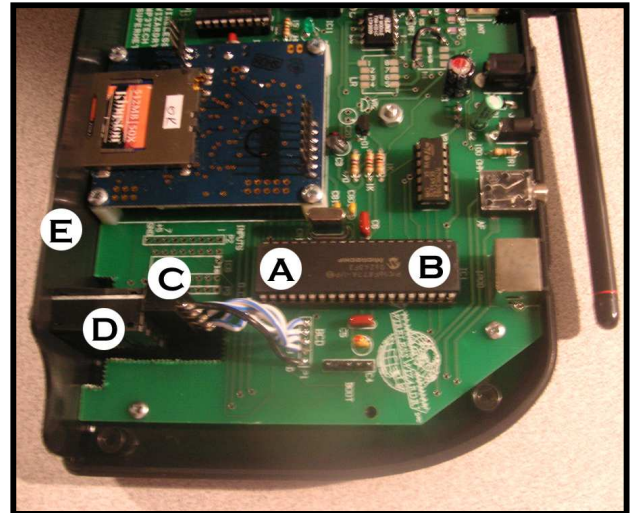

It is very important that the screwdriver is between the chip and the socket that it is plugged into. The socket beneath the chip is also black. Do not apply pressure to the green circuit board at any time as this may damage the board.

Insert the new chip into the socket with proper orientation. The end with the small half-round notch will be toward the back of the unit. This orientation is critical!

Also be sure that the pins are straight and lined up when carefully inserting the chip into the socket. The pins are fragile and will bend easily and break if not carefully aligned.

Re-assemble the case, don't forget to connect the socket to the playlist switch before closing it up. Also be careful to align the led into the lens when replacing the front panel. Please send the old chip back in the protective sleeve and the pre-paid envelope provided. Thank you very much.

It is important to keep in mind that the Mp3Tech will lock up if the SD card is removed while it is playing. You must unplug the power, wait a few seconds, and plug it back in to reset. It is best to always unplug the unit whenever removing or replacing a card.